

Marine Arm Cover Removal and Reapplication.


Process is applicable to both LH and RH arm covers.

1. Start by detaching the cover from the hook Velcro. Make sure the Velcro stays in place and does not come unglued from the arm frame's inner walls.



2. Move to the other side and back of the arm. Repeat the same process being careful that the hook Velcro does not come unglued from inside the arm frame and pull the cover.

If the Velcro seems to be peeling off, press down firmly until it is flat on the surface again.

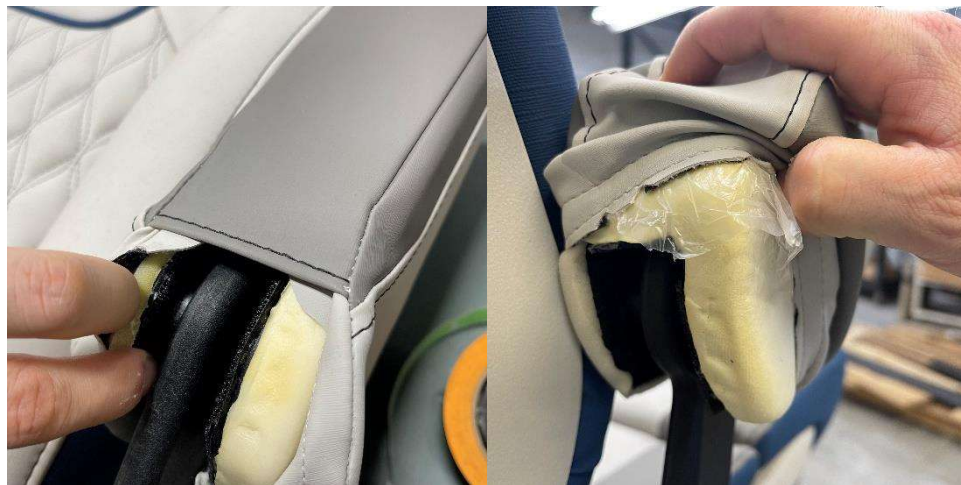

Marine Arm Cover Removal and Reapplication.

3. Pull the cover carefully to not damage the foam substrate or tear the silk film under the cover. The cover should start slipping easily as the cover comes towards the front of the arm.



4. Readjust the silk film and flip the end of the cover that has the Velcro inside out as shown below.



*At this moment, verify that all hook Velcro on the inside of the arm frame is attached and adhered into place to make sure the new cover does not fit loose.


Marine Arm Cover Removal and Reapplication.

5. Pull cover over the arm substrate all the way back to fill completely. If necessary, flip the arm face up and pull cover carefully over the foam to not damage the new arm cover.

The inside part of the arm cover hitting the back substrate will feel difficult to slip on, but this is normal because of the fitted cover.



6. Attach the loop fastener to the hook Velcro on the inside walls of the arm. Flip the salvage to go over the foam and keeping it from going over the Velcro. Make sure all Velcro is secure and in place.

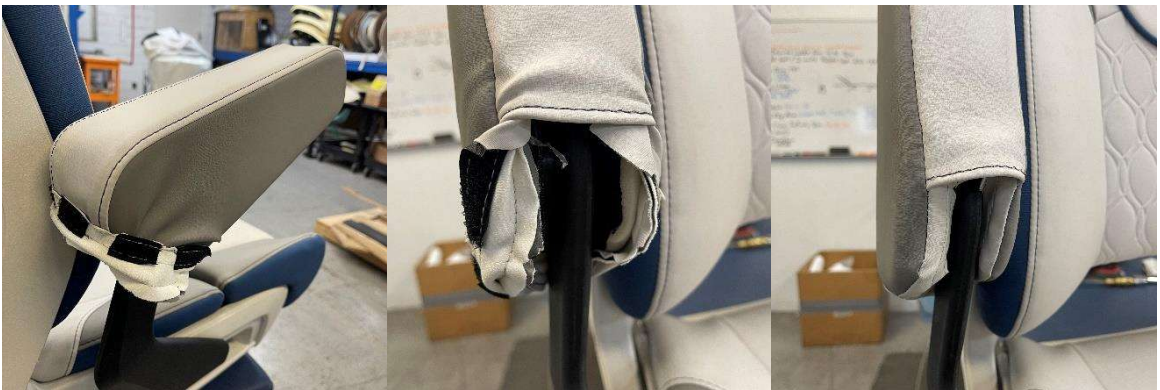

7. Clean and adjust cover as needed.

