

Care and Maintenance Instructions

Isotherm Marine Refrigerators

With proper care and maintenance, Isotherm Marine Refrigerators are designed to last the life of the boat while performing correctly and looking like new

1. After use and while performing general maintenance on the boat, wipe down the interior and exterior with a damp rag using mild boat soap. If necessary, use stainless steel cleaner – do not coat stainless steel with wax as that will block contact with air and cause stainless steel to develop mottling.
2. Wipe the interior and exterior dry with a towel.
3. If leaving the boat for an extended period of time, turn off power supply at the breaker panel (both AC and DC if it is an AC/DC fridge).
4. Prop door open so air can circulate in the fridge when it is off and not in use for expended periods of time to air out the interior.



Simple troubleshooting. If the fridge is not running:

1. Check the breakers to see that they are on.
2. Check the thermostat to see that it is turned to a middle position.
3. Pull the fridge from the enclosure and check the voltage at the electronics module with a voltmeter to be certain the fridge is getting 12+ volts.
4. Connect a jumper wire between the “C” and “T” terminals on the electronics module. If the unit runs, the thermostat has failed and is easily replaced. If the unit does not run, the electronics module may have failed and is easily replaced.
5. Contact Indel Webasto Marine at 954-984-8448 for further assistance.



DC and AC/DC Electronics Modules