

- This guideline is for use with Avalon & Tahoe models which incorporate the Cadet Stand, with an exterior mounted Garmin bracket, and have either a mooring or a playpen cover.
- While using the mooring or playpen cover, the Garmin bracket must be removed to keep damage from occurring to the cover. Failure to remove the bracket with use of the cover will void the warranty from damage by the bracket to the cover.

### Step 1– Remove the Garmin Device

Remove the Garmin device from the holding bracket by depressing the locking mechanism lever and disconnecting the device.



### Step 2 – Remove the Holding Bracket

Remove the holding bracket by unlocking the tension lever which allows the bracket to pivot back and forth. Hold the bracket near the picot point and twist the holding bracket out from the mounting bracket.



### Step 3 – Set the Holding Bracket off to the Side

After removing the holding bracket, hang it toward the inside (center) of the boat for storage / use with a mooring or playpen cover.

