


INSTRUCTIONS FOR BIMINI FRAME AND CANVAS INSTALLATION



STANDARD SQUARE FRAME



D-FRAME

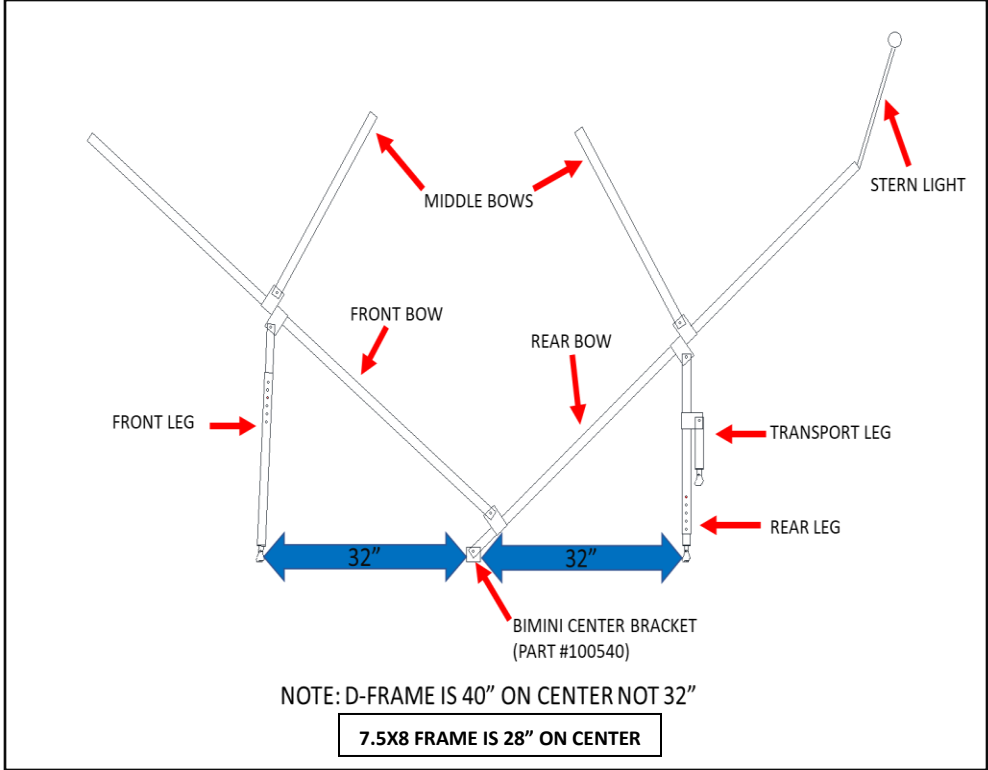

MOUNTING HARDWARE KIT CONSISTING OF:



BIMINI MOUNT (X2)
PART #100540 OR
100540BLK



NYLON INSERT JAM NUT (X4)
PART #050026



BIMINI QK CONNECT SS DECK
BUTTON (X4) PART #100406



BIMINI MOUNT BOLT W/ LOCTITE
(X2) PART #100541



FLAT WASHER (X4)
PART #178001




#10-24X 1 3/4" PAN PHILLIPS (X4)
PART #050348



BIMINI QK CONNECT SS DECK
BARREL NUT (X4) PART #100408



#8X 1/2" SNAP (X8)
PART #050090

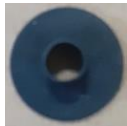

BIMINI MOUNT
WASHERS (X4) PART
#100542

INSTALLING CANVAS ON BIMINI FRAME

STEP 1: LAY THE CANVAS OUT FLAT WITH THE ROD POCKETS FACING UP. MAKE SURE LABEL IS FACING TOWARD YOU WITH THE STERN LIGHT CUTOUT AWAY FROM YOU.

(EASIEST TO DO ON A BENCH OR TABLE.)



STEP 2: BEGIN TO UNZIP THE CANVAS.



STEP 3: SIT THE BIMINI FRAME ON TOP OF THE CANVAS WITH THE FRONT BOW FACING DOWN AND THE STERN LIGHT ON TOP.



STEP 4: ZIP THE CANVAS ON TO THE BOTTOM BOW FIRST AND THEN CONTINUE TO WORK YOUR WAY UP UNTIL YOU REACH THE STERN LIGHT CUTOUT.



FINAL STEP: MAKE SURE THE STERN LIGHT GOES INTO THE CUTOUT ON THE CANVAS AND THEN CONTINUE TO ZIP THE CANVAS ONTO THE FRAME.



STERN LIGHT GOES INTO CUTOUT ON CANVAS.